

 OWS-14 BLUETOOTH EARBUDS USER MANUAL	Warning Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to. To reduce the risk of injury: Keep batteries out of reach of children. Do not heat, open, or dispose of battery pack in fire. Do not allow metal objects to touch the battery on the device. Do not expose battery pack to excessive heat. Paring when successfully pair, the red and blue light will flash on the one earbud, the light will turn off the other one earbud. Power on/off 1.) Take the earphones out of the charging case, automatically turn on; Put the earphones back to the charging case, automatically turn off; 2.) Long press 3 seconds to turn on Long press 5 seconds to turn off. Play/Pause music. When listening to music. Tap left/right earphones once to play or pause the music.	Volume +/-: Quick tap left earphones 3 times to decrease the volume. Quick tap right earphones 3 times to increase the volume. Previous / Next Song When listening to music. Quick double tap left earphones to go to previous song. Quick double tap right earphones to go to next song. Answer/Hang up When there is an incoming call. Tap left or right earphones once to answer the call. Tap left or right earphones again to end the call. Reject When there is an incoming call. Long press left or right earphones for 3 seconds to reject the call. Voice assistant Long press left or right earphones for 3 seconds	Charging Charging the case When the charging case is charging, the digital display showing the charging. Charging the earbuds: When charging the earbuds, red light turns on. The light will turn off when charging is complete.
--	--	---	--

 OWS-14 BLUETOOTH SLUŠALICE UPUTE	Upozorenje Molimo Vas da pročitate sljedeća upozorenja prije korištenja ovih slušalica. Pohranite ove upute zajedno s pakiranjem. Sigurnosne upute uvelike smanjuju rizik od vatre ili ozljeda prilikom korištenja na ispravan način. Kako bi izbjegli rizik od ozljeda: Držite baterije van dohvata djece. Ne zagrijavajte, ne otvarajte i ne bacajte baterije u vatru. Izbjegavajte kontakt između baterije uređaja i metalnih objekata. Ne izlažite baterije izvoru velike topline. Uparivanje Spajanje nakon uspješnog uparivanja, crveno i plavo svjetlo će treperiti na jednoj slušalici, svjetlo će isključiti drugu slušalicu. Uključivanje/isključivanje 1.) Izvadite slušalice iz kutije za punjenje, automatski se uključuju; Vratite slušalice u kućište za punjenje, automatski se isključuju; 2.) Dugo pritisnite 3 sekunde za uključivanje Dugo pritisnite 5 sekundi za isključivanje.	Pusti/pauziraj glazbu. Prilikom slušanja glazbe. Jednom dodirnite lijevu/desnu slušalicu za reprodukciju ili pauziranje glazbe. Glasnoća +/-: Brzo dodirnite lijevu slušalicu 3 puta za smanjenje glasnoće. Brzo dodirnite desnu slušalicu 3 puta za povećanje glasnoće. Prethodna / sljedeća pjesma Prilikom slušanja glazbe brzo dvaput dodirnite lijevu slušalicu za povratak na prethodnu pjesmu. Brzo dvaput dodirnite desnu slušalicu za sljedeću pjesmu. Javljanje/prekidanje poziva Kada postoji dolazni poziv. Jednom dodirnite lijevu ili desnu slušalicu da odgovorite na poziv. Ponovno dodirnite lijevu ili desnu slušalicu za prekid poziva. Odbijanje poziva 3 sekunde pritisnite lijevu ili desnu slušalicu za odbijanje poziva. Glasovni asistent Dugo pritisnite lijevu ili desnu slušalicu 3 sekunde za aktiviranje glasovnog asistenta.	Punjenje Punjenje kućišta: Kada se kućište za punjenje puni, digitalni zaslom koji prikazuje punjenje. Punjenje slušalica: Prilikom punjenja slušalica pal se crveno svjetlo. Svjetlo će se ugasi kada se punjenje završi.
--	--	---	--